



Camera SIM & Setting APN Guide

Installing the SIM Card in the Camera

1. Remove the tamperproof cover from the camera.



Tip: Use your thumb to lift the cover from the small gap next to the plug connected to the camera. You'll feel a slight click — then lift upwards to remove the cover completely.

2. Insert the SIM card with the back (chip side down) facing you.



Note: The slot is spring-loaded. Ensure the SIM clicks into place and doesn't spring back out.

3. Reattach the tamperproof cover and use the provided Allen key to tighten the screw through the hole at the top.



Installing the SIM Card in the Camera



This process only needs to be completed the first time the NOMAD kit is installed in a vehicle.

1. **Download the RideView Companion App**, available on both the [Apple App Store](#) and [Google Play Store](#).


Developer: *LightMetrics Technologies Pvt. Ltd.*

2. **Log in using an Installer account.**

Ensure Wi-Fi is enabled on your phone so it can connect directly to the camera.


3. **Start the vehicle** and wait for the camera to power on.

4. On the app's home screen, tap **“Dash Cam”**


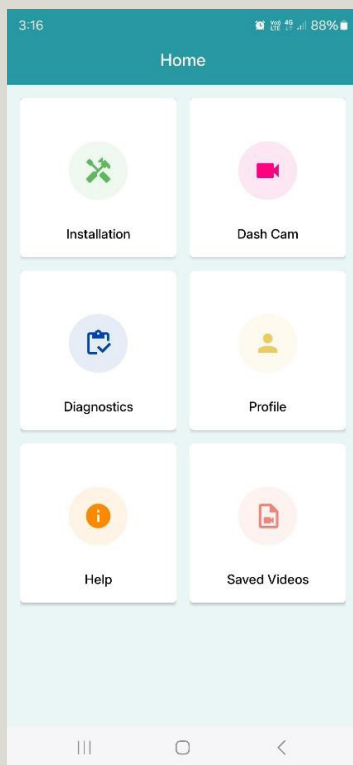


5. The camera's **IMEI number** should appear as the only available device.


Tap on it to connect your phone to the camera.

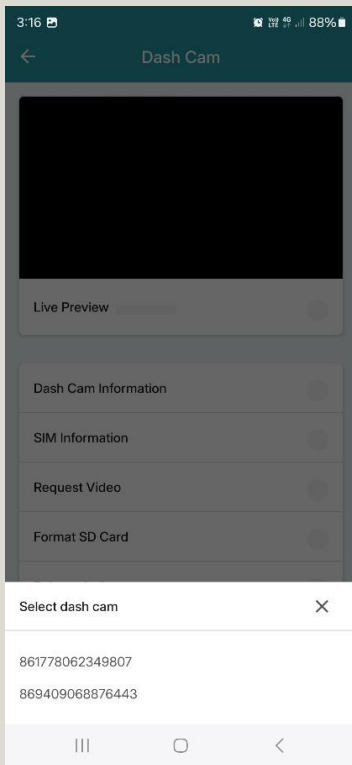


6. Select **“SIM Information”** and make a note of the **APN Name** and **APN** shown.

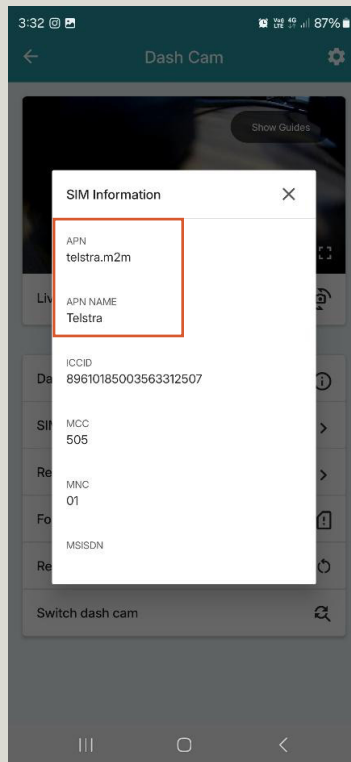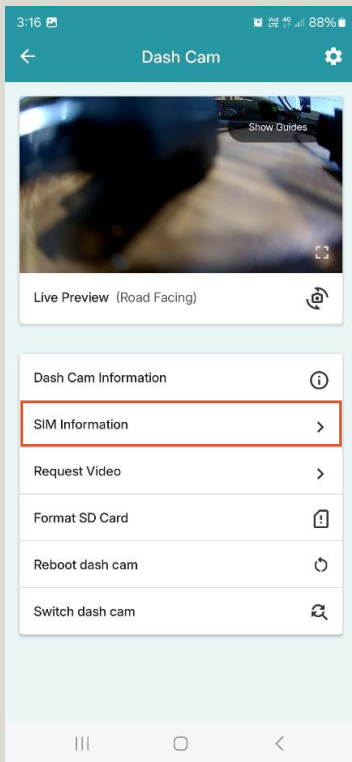

7. Close the SIM Information window and tap the cog icon next to *Dash Cam*.

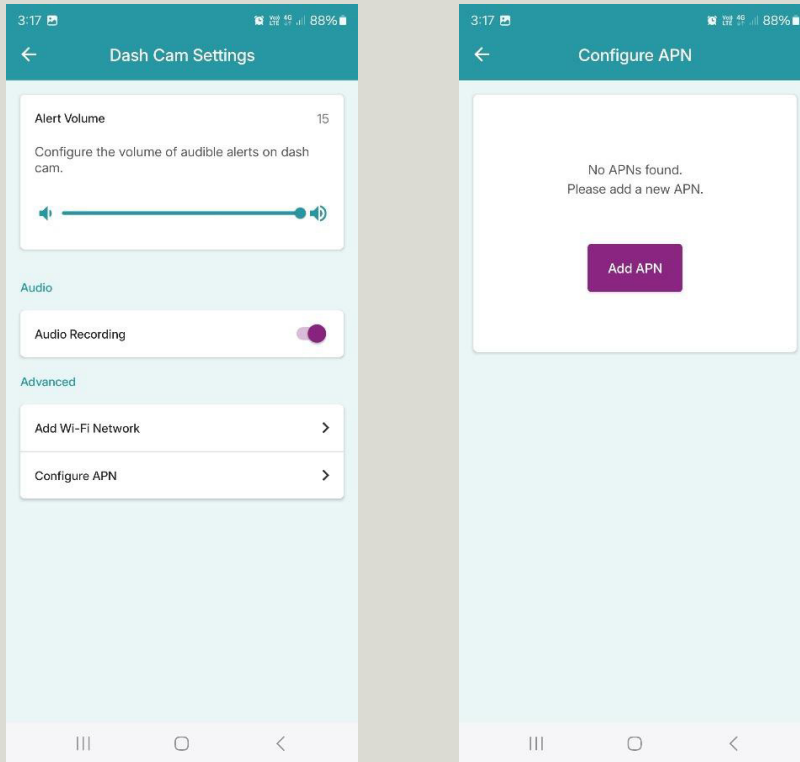

8. Choose “**Configure APN**”, then enter the APN Name and APN you noted earlier. Tap **Save APN**.

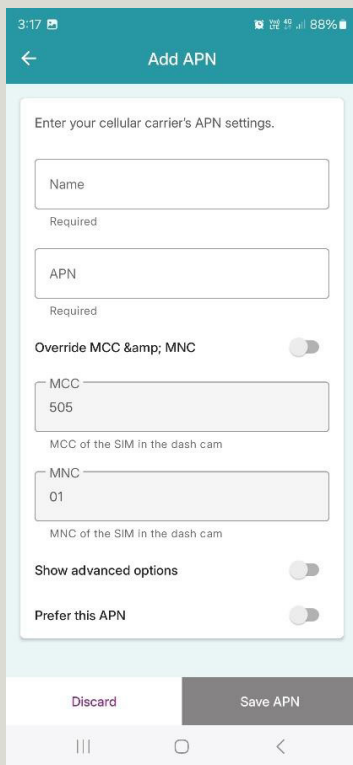

9. If setup is successful, the camera’s LED will flash green every 15 seconds.

CONTACT US

[digicore.com.au](https://www.digicore.com.au)

If there are any issues, please get screenshots if you can and send an email through to support@digicore.com.au and we will help diagnose the problem.

Call +61 3 9945 2240
Unit 4, 22 George Street, Sandringham
VIC 3191 Australia

